



## SLIM & SECURE™

### HANDHELD COLOUR VIDEO MONITOR INSTRUCTION MANUAL (P.2)

Please read the following instructions and warnings carefully.

Keep this instruction manual for future reference.

Tools required: Phillips screwdriver (not included).

### MONITEUR VIDÉO PORTABLE COULEUR MODE D'EMPLOI (P.7)

Veuillez lire avec attention les instructions et mises en garde suivantes.

Veuillez conserver ce mode d'emploi pour toute référence ultérieure.

Outils requis : Tournevis à tête Phillips (non fourni).

### MONITOR DE VÍDEO PORTÁTIL A COLOR MANUAL DE INSTRUCCIONES (P.11)

Lea con atención las siguientes instrucciones y advertencias.

Guarde este manual de instrucciones para futuras consultas.

Herramientas necesarias: destornillador de punta Phillips (no se incluye).

### MONITOR DE VÍDEO A CORES PORTÁTIL MANUAL DE INSTRUÇÕES (P.15)

Leia atentamente as seguintes instruções e avisos.

Guarde este manual de instruções para futura referência.

Ferramentas necessárias: Chave de parafusos Philips (não incluída).

# SLIM & SECURE™

## HANDHELD COLOUR VIDEO MONITOR INSTRUCTION MANUAL

### WARNING!

**THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.**

**Adult assembly required.**

**Keep small parts away from children when assembling.**

- Prevent cord entanglement – do not place Camera in crib or within arm's reach of the baby. Use enclosed Security Clips to help secure cords away from baby's reach.
- Never use extension cords with AC adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test monitor before first use, periodically, and when changing location of the Camera.
- Do not use monitor near water (such as bathtub, sink, etc.).
- Keep monitor away from heat sources (such as stoves, radiators, etc.).
- Make sure there is proper ventilation around all monitor components. Do not place on sofas, cushions, beds, etc. which may block ventilation.
- Nursery monitors use public airwaves to transmit signals. This monitor may pick up signals from other monitors or similar devices and signals broadcast by this monitor may be picked up by other receivers.
- This product is not a toy. Do not allow children to play with it.
- This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product.

### BATTERY WARNING!

- Use only the original rechargeable batteries provided. Please contact Summer Infant, Inc. for replacement batteries. Contact information can be found at the end of these instructions or on the battery itself.
- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Batteries are to be inserted with correct polarity.
- Clean battery and product contacts prior to battery installation.
- Do not short-circuit supply terminals.
- Only the recommended batteries or equivalent are to be used, volts and size.
- Remove batteries when product is stored for long periods of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Do not recharge non-rechargeable batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Keep all batteries away from children.

### WARNING:

- The monitor shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the monitor.
- Battery (battery pack or installed battery) shall not be exposed to excessive heat such as sunshine, fire or the like.
- The plug in adaptor is used as a disconnect device, shall remain readily operable.



Correct disposal of this product. This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



 
This Slim & Secure Handheld Video Monitor type 02801 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For further information regarding this declaration of conformity, please contact Summer Infant Europe Ltd at the address below.

# FEATURES & COMPONENTS: CARACTÉRISTIQUES ET COMPOSANTS : CARACTERÍSTICAS Y PIEZAS: CARACTERÍSTICAS E COMPONENTES:

**MONITOR:**  
**MONITEUR : FACE AVANT**  
**MONITOR:**  
**MONITOR:**



**MONITOR BACK:**  
**MONITEUR : FACE ARRIÈRE**  
**PARTE TRASERA DEL MONITOR:**  
**TRASEIRA DO MONITOR:**

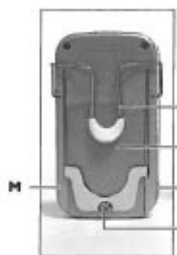

**MONITOR:**

- A** Power & Low Battery LED (Light will illuminate amber when battery is low)
- B** Quick View/Video On/Off
- C** Sound Lights
- D** Battery Strength Icon
- E** Volume Control
- F** Speaker
- G** Power/Menu/Confirm Button
- H** Brightness Control
- I** Belt Clip
- J** Battery Compartment
- K** A/V Out Jack
- L** Adjustable Kickstand
- M** AC Adaptor Jack

**CAMERA:**

- N** Aerial
- O** Power On LED
- P** Nighttime LED's (for darkened room)
- Q** Camera
- R** Microphone
- S** AC Adaptor Jack (on bottom of unit)
- T** Code Button
- U** Power Button

**ACCESSORIES:**

- V** AC Adapter (2)
- W** AV Cable
- X** Security Clips (six)
- Y** Wall Anchor (one)
- Z** Screw (one)

**MONITOR:**

- A** Indicador LED de potencia y de nivel bajo de carga de la batería (cuando el nivel de carga de la batería sea bajo, la luz del indicador será color ámbar)
- B** Vista rápida/Video encendido/apagado
- C** Luces de sonido
- D** Símbolo del nivel de carga de la batería
- E** Control de volumen
- F** Altavoz
- G** Botón de encendido/Menu/Confirmar
- H** Control del brillo
- I** Clip para cinturón
- J** Compartimento de la batería
- K** Salida A/V
- L** Soporte ajustable
- M** Conector para el adaptador de CA

**CÁMARA:**

- N** Antena
- O** Indicador LED de encendido
- P** Indicador LED nocturno (para habitaciones oscuras)
- Q** Cámara
- R** Micrófono
- S** Conector para adaptador de CA (en la parte inferior de la unidad)
- T** Botón Code
- U** Botón Alimentación

**PIEZAS ADICIONALES:**

- V** Adaptador de CA (2)
- W** Cable AV
- X** Clips de seguridad (6)
- Y** Anclaje de pared (1)
- Z** Tornillo (1)

**MONITEUR :**

- A** Voyant DEL Alimentation et batterie faible (Le voyant devient orange lorsque la batterie est faible)
- B** Marche/Arrêt Vidéo/Aperçu rapide
- C** Témoins lumineux de niveau sonore
- D** Icône Puissance de la batterie
- E** Réglage du volume
- F** Haut-parleur
- G** Bouton confirmation Alimentation/Menu
- H** Réglage de la luminosité
- I** Clip ceinture
- J** Compartiment batterie
- K** Prise jack audio/vidéo
- L** Béquille latérale réglable
- M** Prise adaptateur AC

**CÂMERA :**

- N** Antenne
- O** Voyant de mise en marche DEL
- P** Voyant lumineux DEL nuit (pour les chambres obscures)
- Q** Câmera
- R** Microphone
- S** Adaptateur AC Jack (en bas de l'unité)
- T** Bouton Code
- U** Bouton Alimentation

**ACCESSOIRES :**

- V** Adaptateur AC (2)
- W** Câble audio/vidéo
- X** Clips de sécurité (six)
- Y** Cheville (une)
- Z** Vis (une)

**MONITOR:**

- A** LED de alimentação eléctrica e pilha com pouca carga (a luz acende com cor amarela quando a carga da pilha está em baixo)
- B** Visualização rápida e ligar/desligar video
- C** Luces de som
- D** Ícone de nível de carga da pilha
- E** Regulação de volume
- F** Altifalante
- G** Botão de Alimentação eléctrica/Menu/Confirmar
- H** Regulação de brilho
- I** Clípe de cinto
- J** Compartimento da pilha
- K** Tomada de saída de A/V
- L** Suporte ajustável
- M** Tomada do adaptador de CA

 
**CÂMARA:**

- N** Antena
- O** LED de alimentação eléctrica ligada
- P** LED nocturno (para compartimentos escuros)
- Q** Câmera
- R** Microfone
- S** Tomada do adaptador de CA (na parte inferior da unidade)
- T** Botão Code
- U** Botão Alimentação

**Auxiliares:**

- V** Adaptador de CA (2)
- W** Cabo de A/V
- X** Clipes de segurança (seis)
- Y** Bucha de parede (uma)
- Z** Parafuso (um)

**CAMERA:**  
**CÂMERA : FACE AVANT**  
**CAMERA:**  
**CAMERA:**

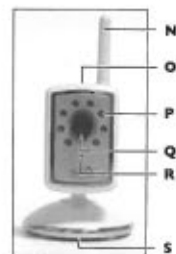

**CAMERA BACK:**  
**CÂMERA : FACE ARRIÈRE**  
**PARTE TRASERA DE LA CÁMARA:**  
**TRASEIRA DA CÁMARA:**



## SET UP & USE:

 
### CAMERA

#### Table Top or Wall Mounting:

Determine a location for the Camera that will provide the best view of your baby in their crib. Place the Camera on a flat surface, such as a dresser, desk, or shelf. Or mount the Camera on a wall. Be sure not to place camera in crib or within arm's reach of baby. Do not place the Camera near open windows, direct sunlight or heat sources. **Be sure to test reception and Camera positioning before mounting to a wall (see "Testing Your Initial Set Up" section).**

#### To Wall Mount:

- 1) Pre-drill a hole in the wall (3/16", 5mm, drill bit) (Figure A).
- 2) Insert the wall anchor (included) into the hole and with a hammer, tap gently on the end until the wall anchor is flush with the wall.
- 3) Insert the screw (included) into the wall anchor and tighten screw until only 1/4" (6mm) of the screw is exposed.
- 4) Insert AC Adapter into the Camera's AC Adapter Jack.
- 5) Slide the back of the Camera down onto the screw until the Camera is secure to the wall.
- 6) Plug the AC Adapter into a standard electrical outlet.
- 7) Secure the cord to the wall using the 6 Security Clips included to keep cord away from baby's reach (Figure B).
- 8) Slide switch on side of Camera to ON and the POWER ON LED will illuminate solid green.



### MONITOR

#### To Use in Video and Audio Mode:

**Step 1:** Place the Monitor in the room from which you want to monitor your baby (ie. bedroom or living room). Plug an AC Adapter into the AC Adapter Jack and the other end into a standard electrical outlet.

**Step 2:** Press and hold "POWER ⏻" button for 4 seconds to turn on until video or Summer logo appears on screen.

**Step 3:** For audio and no video, press the VIDEO ON/OFF button on top of the unit.

**Step 4:** To turn the monitor off completely, press and hold the "POWER ⏻" button for 3 seconds.

#### ADDING ADDITIONAL CAMERAS

**Note:** This product can accept up to four cameras. To order an additional camera (#02830), please contact our Customer Service Department by phone at 1-800-268-6237 or via e-mail at [customerservice@summerinfant.com](mailto:customerservice@summerinfant.com) for details. (For Europe Call +44 (0)208 420 4429 or [customerserviceuk@summerinfant.com](mailto:customerserviceuk@summerinfant.com))

- Plug the AC adapter into AC jack in the bottom of the CAMERA and the other end into a standard wall outlet.
- Slide Switch on side of CAMERA to ON and POWER ON LED will illuminate solid green.

#### Menu Selection:

- Turn on camera and receiver and Press "POWER ⏻" button on Parent Unit to enter the OPTION menu for CAM selection.
- Press volume button to select empty channel (CAM 2, 3, 4).
- ADD CAMERA - Press and hold the Video On/Off button for 2 seconds until the Power LED flashes amber and within 20 seconds, press the "CODE" button once at the back of the camera. The image from the new camera should appear on the screen within 1 second.

Please bring the camera and receiver close to each other during the process, to make sure the RF signal is strong enough and to prevent failure caused by interference.

#### Camera Scanning:

The monitor is designed with a scanning feature that will allow parents to scan up to 4 cameras with each scan duration of about 8 seconds.

**Step 1:** Make sure additional cameras are synched and turned on. See "Adding Additional Camera's" section (above).

**Step 2:** To activate the SCAN feature, call up the OPTION menu by pressing the "POWER ⏻" button on the monitor. Scroll selection to "SCN" and confirm selection by pressing the "POWER ⏻" button once.

**Step 3:** The monitor will scan all active cameras and image will appear on the screen for about 8 seconds.

**Step 4:** To exit scanning and to view a particular camera, press the "POWER ⏻" button once.

**Step 5:** To resume scanning, repeat Step 2.

## SET UP & USE continued:

### Testing Your Initial Setup:

Be sure to test your Monitor's reception before initial use.

We also recommend testing your Monitor's reception periodically. Please keep in mind that the Slim & Secure™ Handheld Colour Video Monitor will not provide the same level of picture quality as your television with cable, satellite dish, or digital service.

To test reception you will need two adults. One adult should view the picture on the Monitor while the other is in the nursery to adjust the Camera. Often the quality of the reception can be improved by slightly repositioning the Camera, Monitor, or both. It may help to place a stuffed animal or doll in the crib to simulate the position and size of your baby. Adjust the picture quality on the Monitor as needed by using the Brightness Adjustment on the front of the Monitor.

To test sound quality, have one adult speak in both a normal tone and a whisper near the crib. Adjust volume on the Monitor's Volume Adjustment as needed.

### To Use the Video Monitor in Portable Mode:

For use in portable mode, the Monitor requires 1 3.7V LITHIUM-ION rechargeable battery (included).

#### Tips:

- Before using Monitor in portable mode (battery), be sure to charge battery 12-16 hours.
- To charge battery, plug the larger AC Adapter into the Monitor's AC Adapter Jack. Plug the other end into a standard electrical outlet.
- After initial 12-16 hour charge, to achieve optimal battery life, charge battery overnight and unplug all day during use.

**Note:** Only charge battery when low indicator light comes on. Constant recharging of your battery before low battery indicator light comes on will decrease the life of your batteries.

- When battery is low, the Power On LED will illuminate amber, indicating that the battery needs to be recharged.
- If battery is exhausted, remove immediately from the Monitor.
- Properly dispose of exhausted battery.

### Battery Installation:

**Note: This step is only needed if replacing battery.**

1. Locate the battery compartment door on back of monitor.
2. Slide open battery door and insert battery. Ensure correct connection (Figure C). Slide battery door back in place.



### Belt Clip:

For convenience and portability, you can clip the Monitor to your belt or waistband after a battery has been installed (Figure D).



### Footrest:

The Monitor has a built-in footrest for tabletop convenience. Simply flip out footrest and place the Monitor on a stable, level surface (Figure E).



### Pairing MONITOR and CAMERA:

The Monitor and Camera are paired at the factory for privacy reasons. If the Monitor and Camera are not pairing with each other for any reason, please pair them as described below.

**Step 1:** Move the Monitor to the same area as the Camera. With both the Camera and Monitor on, press the "POWER" button once to call up the OPTION menu. Press the Volume Button to select channels (CAM 1, 2, 3, 4).

**Step 2:** Press and hold the Video On/Off button for 2 seconds until the Power LED flashes amber and within 20 seconds, press the "CODE" button once at the back of the camera.

**Step 3:** You should then see a picture from the Camera on the Monitor.

**Step 4:** If this is unsuccessful, you should repeat steps above making sure the Camera and Monitor are close enough to each other for pairing.

## TIPS FOR IMPROVING RECEPTION:

- Position the Monitor closer to the CAMERA if necessary.
- Move Monitor away from other monitors, cordless phones, walkie-talkies, etc.; moving even slightly could greatly improve reception.
- If you hear a feedback or squealing noise, move the CAMERA and the Monitor further away from each other.

## SPECIAL FEATURES:

- **Video Sleep Mode:** While operating on battery power, the video screen will go to sleep, to conserve battery power. Audio and sound lights will function normally. Press the Video On/Off to resume viewing. This option is NOT available when using AC adapter.
- **Sound Lights:** The 4 Sound Lights will illuminate on the Monitor depending on the level of your baby's sounds. For example, if your child is just cooing, only one or two lights will illuminate. If your baby is crying, several will illuminate, depending on how loud they are crying. This feature is particularly helpful if you are in a noisy room.
- **Quick View/Video On/Off Button:** This button turns the video mode on. If you only want to hear your baby, press the Quick View/Video On/Off Button again to shut off the video. The Quick View/Video On/Off Button is ideal for easily turning on the video option in the middle of the night.
- **Night Vision:** In a darkened room, the Monitor will automatically use its infrared LED's to transmit a clear image of baby, so you can see your child at night!
- **Multi-Position Camera/Microphone:** The Camera/Microphone should be positioned so it is facing baby as much as possible. This multi-position feature is unique to Summer Infant nursery monitors. It allows the microphone to focus on baby's voice while filtering out other household noises.
- **AV Cable:** To view video through your TV, plug the AV cable jack connection into monitor and connect the other ends into the corresponding color coded parts on your TV.

**Note:** The Monitor's power button must be turned ON and CAM pre-selected before connecting the AV cable. Once the AV cable is connected the Monitor's controls cannot be activated.

**For best results use on a 27" TV or smaller.**

## PROBLEM SOLVING:

No picture or sound on Monitor

- Make sure the Monitor is turned on
- Make sure the AC Adapters are plugged in
- Make sure the outlets are working
- Make sure Monitor and Camera are PAIRED up. (refer to "Pairing MONITOR and CAMERA" section)

Sound but no picture on Monitor

- Press the Quick View/Video On/Off Button once to turn on video mode
- Try adjusting the Brightness Control on the Monitor
- Test reception by moving the Monitor and/or CAMERA to different locations

Picture but no sound

- Turn up the volume on the Monitor using the Volume Control

Picture not clear

- Position the Monitor closer to the CAMERA if necessary
- Move Monitor away from other monitors, cordless phones, walkie-talkies, etc.
- Try adjusting the Brightness Control on the Monitor
- Test reception by moving the Monitor and/or CAMERA to different locations

Squealing sound

- Move the CAMERA and the Monitor further away from each other



**Summer Infant, Inc.**  
1275 Park East Drive  
Woonsocket, RI 02895 USA  
1-800-268-6237

**Summer Infant Europe, LTD.**  
Office Suite 6, Second Floor  
Bournehall House, Bournehall Road  
Bushey, Hertfordshire WD23 3HP UK  
+44 (0) 208 420 4429

© 2009 Summer Infant, Inc.  
Colors and styles may vary.  
Please retain information  
for future reference.

**MADE IN CHINA.** 7/09