



## IMPORTANT! KEEP FOR FUTURE REFERENCE.

Tools required: Phillips head screwdriver (not included).

### **WARNING:**

This product contains small parts. Adult assembly required.  
Exercise care when unpacking and assembling product.

For use with children birth and up.

## INSTRUCTION MANUAL

### **SURE AND SECURE™ DELUXE WOOD WALK-THRU GATE**

Thank you for buying the Sure and Secure™ Deluxe Wood Walk-Thru Gate from Summer Infant. This pressure-mounted gate helps you create and maintain a secure environment for your child. It has a hinged swinging door that opens easily in either direction with one hand. It also swings closed automatically. It's fully adjustable to fit openings from 76 cm and 86 cm. In normal use there is no need for mounting holes that damage woodwork and walls. For added security use the mounting cups and screws that are provided.

**Please read all the instructions before installing the gate.**




- For use for children up to 24 months of age.
- Never leave child unattended.
- To prevent falls, never use at the top of the stairs.
- Suitable for use for most doors and openings between 76 cm and 86 cm. We recommend that for installations where walls or door jams are not rigid, that the wall cups that are supplied be used.
- For wider openings, 9 cm extensions are available separately.

** WARNING:** The position of the safety gate in relation to the stairs may have an adverse affect on your child's safety.

Please note the following:

- It is not recommended to use a pressure mounted gate at the top of the stairs.
- If the safety gate is used at the bottom of the stairs to prevent the child from climbing the stairs, it must be placed on the lowest stair.
- After installation check gate to ensure it is properly fixed and secure.
- This gate is designed to meet EN 1930 for Safety Gates and does not address products designed for use across window openings.


## FEATURES & COMPONENTS:

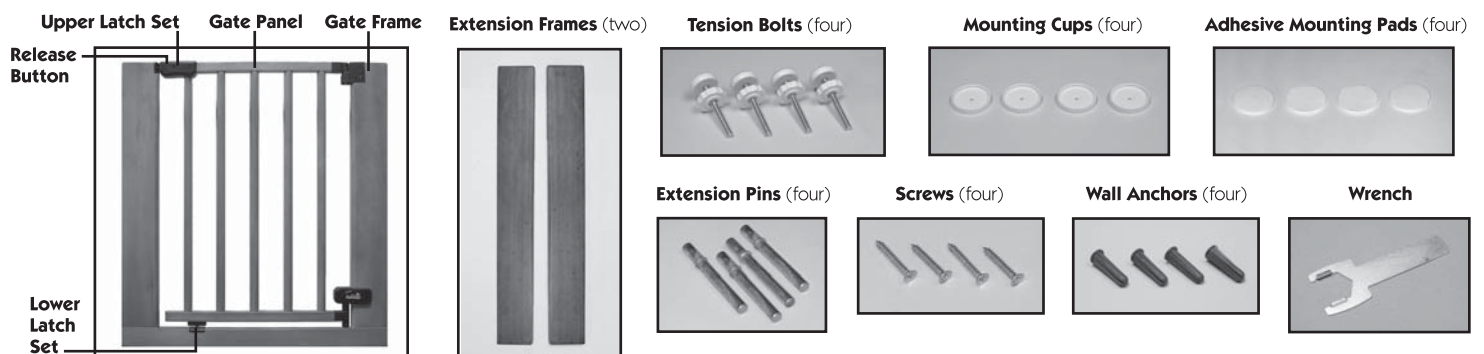

# SET UP:


**NOTE: EXTENSIONS AND EXTENSION PINS NOT INCLUDED.**

**1** Measure the width of the opening where you intend to install the gate. Please refer to the following pictures to determine the correct installation configuration.

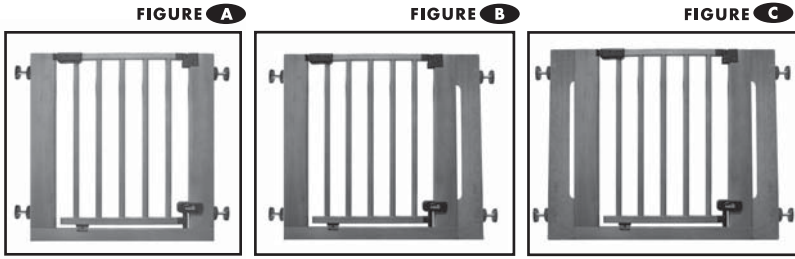


(29 1/2" - 33 1/2") without Extension Frame (33 1/2" - 37 1/2") with Extension Frame (37 1/2" - 40.5") with Extension Frame

**2** To use with extension frame assemble as shown in Figure D.

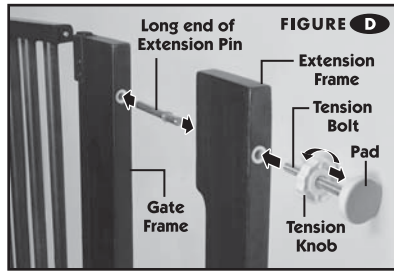

**3** Screw the tension knobs down the tension bolts until they contact the pads. Insert 4 tension bolts into holes on outside and slide inward towards frame as far as possible.

**4** Place the gate in the opening so that the bottom of the gate frame is completely flat on the floor, as shown in Figure E.

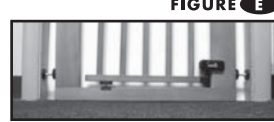

**Optional mounting cup installation:** Fasten mounting cups to the doorframe or studs with screws as shown in Figure F. If mounting into wall use wall anchors. Note: The adhesive mounting pads are included only for positioning the mounting cups and must be used in conjunction with screws.



## OPERATION:

**To open the gate:** (see Figure N)

- slide the release button away from the door frame or wall
- lift up the gate panel
- swing open in either direction

**To close the gate:**

Simply release the gate and it will close automatically.


**Caution:** After closing the gate, ALWAYS check to be certain that it is latched securely

### Troubleshooting

If the gate does not stay closed:

- The Upper latch set is not properly adjusted.

**Solution:** Adjust the upper tension knobs by turning them counter-clockwise to release tension or clockwise to increase tension. Ensure that the upper latch set

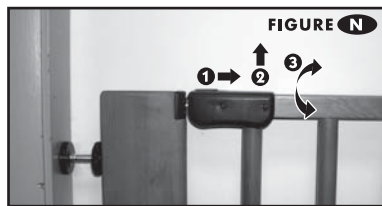

**5** Center the gate in the opening, so that the distance from the bottom of gate frame to each side wall is equal, as shown in Figure H. Use the marks etched into the wrench as a ruler. Slide the tension bolts out until the pads contact the door frame or wall. Then screw the tension knob away from the pad until it contacts the gate frame as shown in Figure I.



FIGURE H



FIGURE I

**6** Tighten both of the tension knobs on the bottom inward towards the frame at the same time, as shown in Figure J. Then tighten both of the tension knobs on the top inward towards the frame at the same time, as shown in Figure K, so that the upper latch set goes below the release button completely, as shown in Figure M.

**To verify installation:** Push the frame to ensure that it is secure in the opening and then push the gate panel to ensure that the upper and lower latch sets lock securely in the housings on the frame, as shown in Figures L and M.

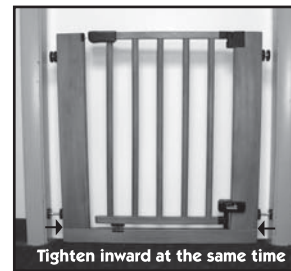


FIGURE J

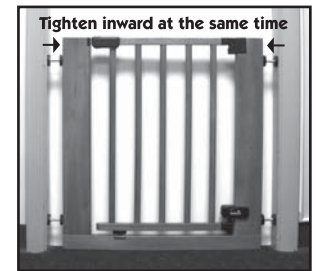


FIGURE K

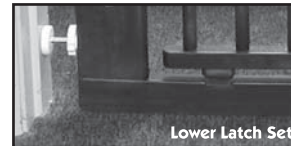


FIGURE L



FIGURE M

**Note:** Wrench is provided for final tightening of all four tension knobs (if necessary), as shown in Figure G.


**Note:** If gate is difficult to unlatch, top tension knobs may be too tight.

button always remains below the release button as shown in Figure M. Also ensure that the upper latch set button engages securely when the gate swings closed and that it can be released properly when the release button is pushed.

- Lower latch set position is too low.

**Solution:** Although unusual, some door frames may be out of alignment. In this case you may have to adjust the individual tension knobs to ensure that the gate is aligned properly. Make sure the upper latch set is still below the release button as shown in Figure M.

If the gate does not stay in position it may not be installed properly as shown in Figure M. Remove and reinstall the gate, making sure the gate is installed correctly as shown in Figure O.

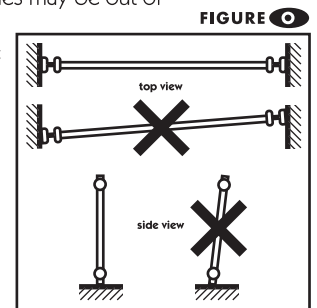

## MAINTENANCE:

- Regularly check tension knobs and rubber pads to make sure the gate is securely in place.
- Do not use the gate if any components are damaged or missing.
- Wipe surface with a damp cloth or sponge using mild detergent and warm water.

We at Summer Infant stand behind all of our products. If you are not completely satisfied or have any questions, please contact our Customer Service Department at 1-800-268-6237 or e-mail us at [customerservice@summerinfant.com](mailto:customerservice@summerinfant.com)

**Summer Infant, Inc.**  
6 Blackstone Valley Place, Suite 206  
Lincoln, RI 02865 USA  
1-800-268-6237  
[www.summerinfant.com](http://www.summerinfant.com)  
© 2003 Summer Infant, Inc.

**Summer Infant Europe, LTD.**  
20 Sparrows Herne  
Bushey, Hertfordshire  
WD23 1FX UK 44 (0)20 8420 4429

**MADE IN CHINA.**  
Colors and styles may vary.